



## Low Profile Walker

Single Patient Use Only • Rx Only



### IMPORTANT INFORMATION


Please read carefully and completely before applying.

### INDICATIONS

Consult your medical professional immediately if you experience sensation changes, unusual reactions, swelling or prolonged pain while using this product. Use only as directed by your medical professional.

### DIRECTIONS FOR USE

1. Remove wrap and secure around foot and lower leg.
2. Insert wrapped lower leg/foot into boot frame at 90° angle.
3. Center the uprights over the ankle so that they are parallel with the leg.
  - a. Remove upright coverings (plastic sleeves or pull tabs) from hook strips on the inside and secure wrap to uprights.

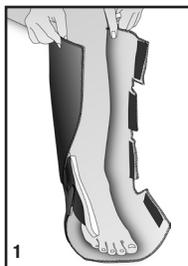

4. Beginning with bottom strap, pull through d-ring and secure with hook and loop closure. Working your way up the leg secure remaining straps.



### NOTE

- After initial fitting, the wrap does not need to be removed from boot frame for re-application. Simply release straps and wrap to remove.
- Extra pads are included to fill in any space around malleoli or provide extra padding around uprights for additional patient comfort.



Manufactured by DeRoyal  
200 DeBusk Lane  
Powell, TN 37849 U.S.A.  
888.938.7828  
865.938.7828

Part #0-502  
©2008 DeRoyal. All Rights Reserved.  
Revised 8/08



## Low Profile Walker

Single Patient Use Only • Rx Only



### IMPORTANT INFORMATION


Please read carefully and completely before applying.

### INDICATIONS

Consult your medical professional immediately if you experience sensation changes, unusual reactions, swelling or prolonged pain while using this product. Use only as directed by your medical professional.

### DIRECTIONS FOR USE

1. Remove wrap and secure around foot and lower leg.
2. Insert wrapped lower leg/foot into boot frame at 90° angle.
3. Center the uprights over the ankle so that they are parallel with the leg.
  - a. Remove upright coverings (plastic sleeves or pull tabs) from hook strips on the inside and secure wrap to uprights.

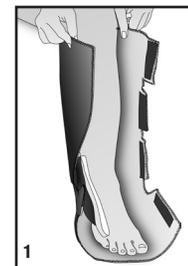

4. Beginning with bottom strap, pull through d-ring and secure with hook and loop closure. Working your way up the leg secure remaining straps.



### NOTE

- After initial fitting, the wrap does not need to be removed from boot frame for re-application. Simply release straps and wrap to remove.
- Extra pads are included to fill in any space around malleoli or provide extra padding around uprights for additional patient comfort.



Manufactured by DeRoyal  
200 DeBusk Lane  
Powell, TN 37849 U.S.A.  
888.938.7828  
865.938.7828

Part #0-502  
©2008 DeRoyal. All Rights Reserved.  
Revised 8/08